

# LS2208 Programming Instructions for Enable Inventory Software

1.



SCAN OPTIONS

4.



Convert UPC-E to UPC-A  
(Enable)

2.



<DATA><SUFFIX>

5.



Convert UPC-E1 to UPC-A  
(Enable)

3.



ENTER

6.



System Character & Country Code  
(< COUNTRY CODE> <SYSTEM CHARACTER> <DATA>)

Use to reset to factory defaults



SET DEFAULTS