

Programming the Inateck Scanner



1.

Enter Setup




2.

(*) Enable UPC-A




3.

UPC-A Outputs 0

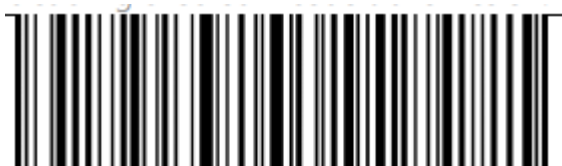

4.

Transmit UPC-A Checksum

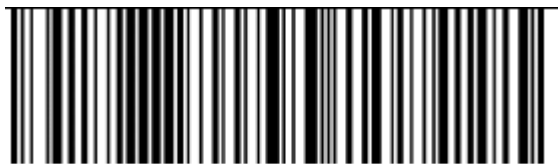

5.

Convert UPC-E to UPC-A



6.

Exit and Save